



SAFETY PRECAUTIONS & INCLUDED ACCESSORIES

Thanks for your purchasing of our products

Please read this user manual for installation carefully before get it installed, so that you can avoid some problems because of incorrect operating or installing ways.




Safety Precautions:

Please mind cautions as below

1. This product is mostly meant for outdoor usage
2. Make sure every parts are screwed well on the application place
3. The product installation and maintenance must be done by professionals only.
4. To avoid damage to the product, especially the glass, please handle in care.
5. Before cleaning the street light, please switch off the power and use dry cloth to clean but do not use any chemical or corrosive materials

Content:

Firstly, please check if every parts are completed, if any missed then please contact at your convenient time

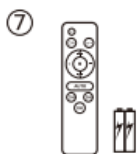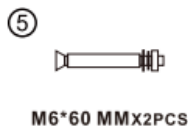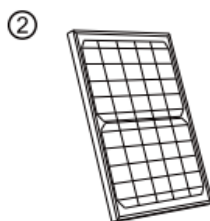

- ① solar lamp
- ② solar panel
- ③ bracke
- ④ M8*60 MM /2PCS
- ⑤ M6*60 MM /2PCS
- ⑥ Screws
- ⑦ Remote control


If any problems occurred please contact us in time and provide more details about it, then we'll provide solutions as soon as possible after analyzing.






INSTALLTION & REMOTE INSTRUCTIONS


Wall Installation

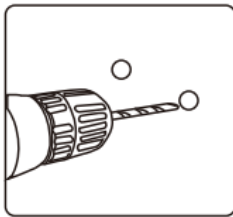

1. Electric drill drilling

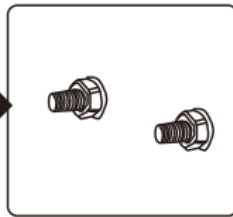


2. Exploding screws

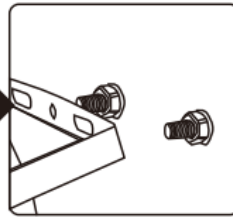


3. Remove the nut
and put the bracket in




4. Tighten the nut

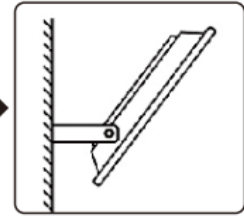


5. Wall installation

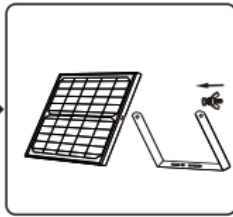

6. The bracket is fixed on the
solar panel

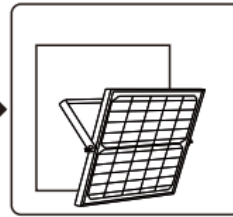

7. Install solar panels

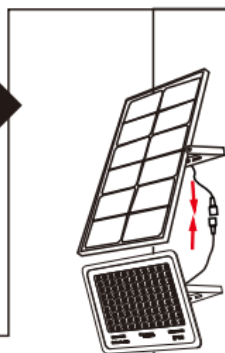


NOTICE:


Two ends of the bump indicated by the red arrow should be in same horizontal line, then the power cords at both ends need to be inserted and fixed.



Notice

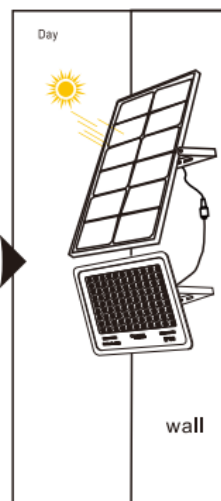


9. Adjust the orientation of the
solar panel

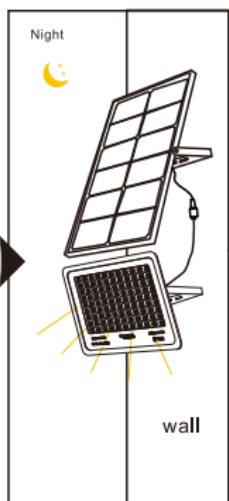

10. Installation is complete,
lights up at night

8. Power cord connecting the lamp body and the solar panel

Remote:

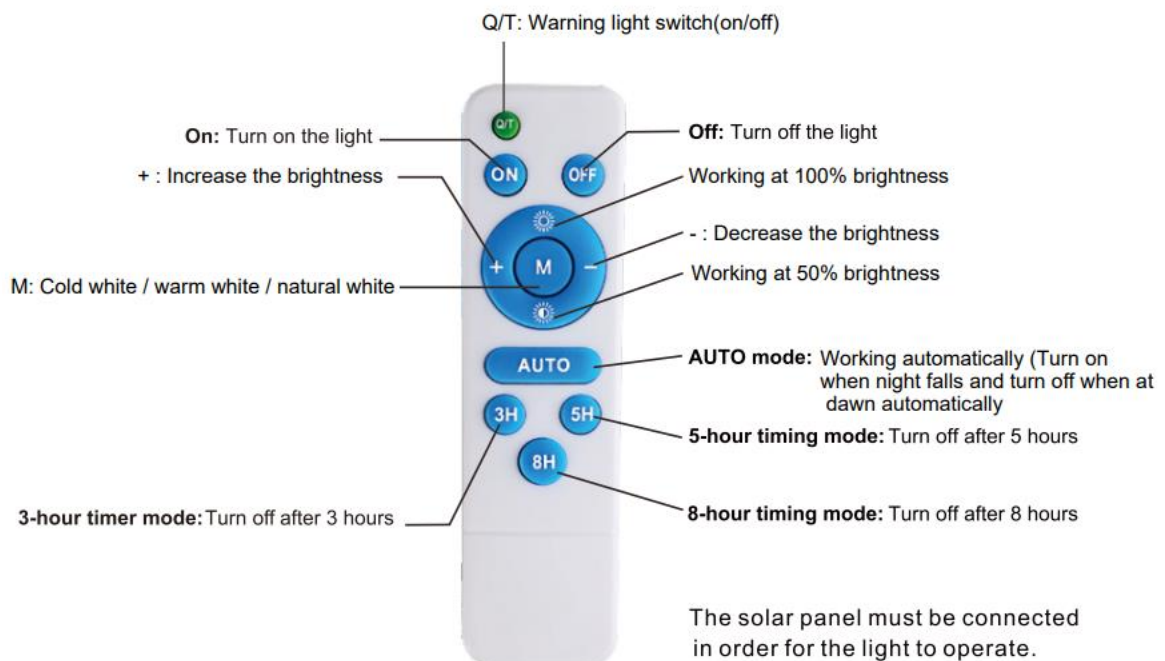



PRODUCT WARNINGS

- ✚ Please turn off power before install or change assembly parts.
- ✚ The input voltage and lamps should be matched, after connecting the power line.
- ✚ Please make sure the wiring section is insulated.
- ✚ Professionals must install and disassemble the lamps.
- ✚ Surge is the number 1 cause of LED light failure. Outdoor lights must have surge at fixture, pole, and breaker.
- ✚ Surge is the number 1 cause of LED light failure. Indoor lights must have surge at fixture and breaker.

PRODUCT TROUBLESHOOTING

Issue	Check points
Light Flickers	Check all wiring for disconnections, shorts and burnt wiring and connections. Confirm steady input voltage to the light fixture, fluctuating input voltage will harm the LED driver and can lead to premature failure. Lights with photocells can have photocell tag from ambient light or light reflecting at the sensor. Simply cover the photocell completely and see if flickering continues while the photocell is covered. Call Tech Support for help if none of the above solves the issue.
Light does not work at all.	Check all wiring for disconnections, shorts and burnt wiring and connections. Confirm steady input voltage to the light fixture, fluctuating input voltage will harm the LED driver and can lead to premature failure. If input voltage is not in the voltage range of the fixture, you will need to find the source of your input voltage issue. Call Tech Support for help if none of the above solves the issue.

For more technical information, install questions, troubleshooting help or warranty claims, we have a dedicated US Tech and Customer Support Team to help solve any issues you have and can be reached by email or phone. If you need help with any of our products, we are here for you so that you are never in the dark!

BETTER LIGHTS. BETTER SUPPORT.

