


## INSTALLATION GUIDE

### How to install a motion sensor receptacle on the Next Gen IV fixtures

1. Remove the Philips screw on the bottom right side of the led panel.
2. Open the fixtures case by using the 2 latches on both sides of the mount.

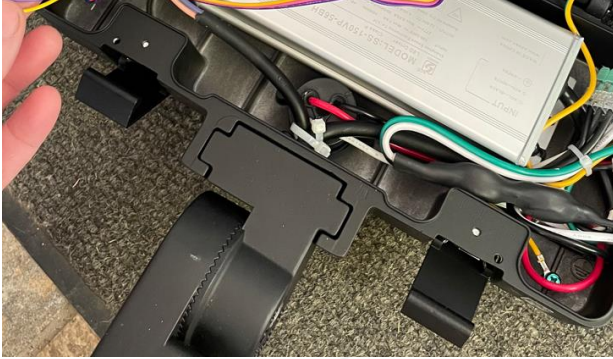

3. Secure the motion sensor receptacle with the Philip screws that are provided.




4. Connect the wires from the receptacle to the clear connectors.
  - a. The pink wire from the receptacle goes to the pink wire that's coming from the driver.
  - b. The purple wire from the receptacle goes to the purple wire that's coming from the driver.
  - c. The yellow wire from the receptacle goes to the yellow wire that's coming from the driver.



## INSTALLATION GUIDE



5. Secure the fixture using the 2 latches on both sides of the mount.
6. Before installing the motion sensor, remove the plastic protector that's protecting the motion sensor's prongs.
7. Program the motion sensor.

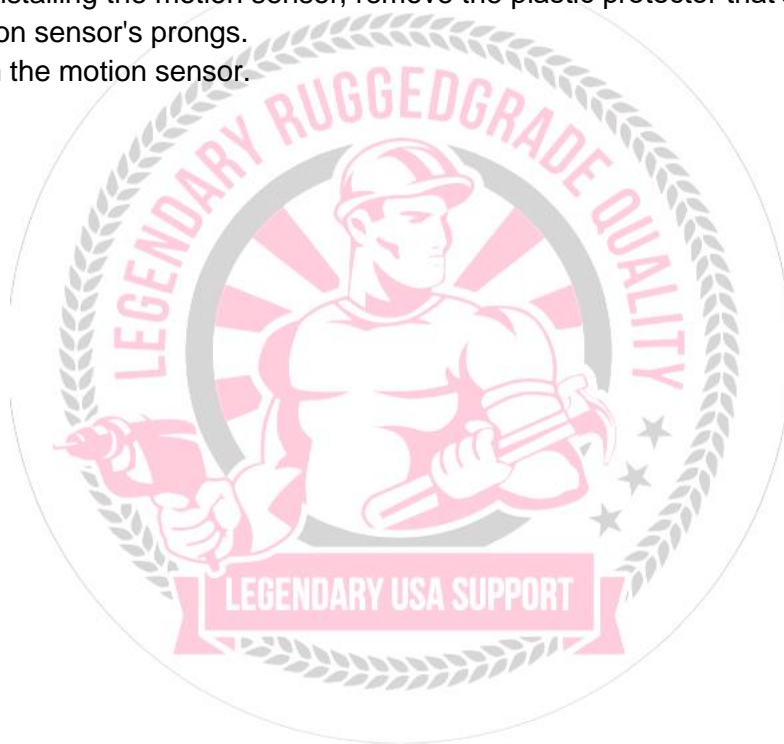

## PRODUCT WARNINGS

- ⚡ Please turn off power before install or change assembly parts.
- ⚡ The input voltage and lamps should be matched, after connecting the power line.
- ⚡ Please make sure the wiring section is insulated.
- ⚡ Professionals must install and disassemble the lamps.
- ⚡ Surge is the number 1 cause of LED light failure. Outdoor lights must have surge at fixture, pole, and breaker.
- ⚡ Surge is the number 1 cause of LED light failure. Indoor lights must have surge at fixture and breaker.

## PRODUCT TROUBLESHOOTING

| Issue                       | Check points   |
|-----------------------------|--|
| Light Flickers              | Check all wiring for disconnections, shorts and burnt wiring and connections. Confirm steady input voltage to the light fixture, fluctuating input voltage will harm the LED driver and can lead to premature failure. Lights with photocells can have photocell tag from ambient light or light reflecting at the sensor. Simply cover the photocell completely and see if flickering continues while the photocell is covered. Call Tech Support for help if none of the above solves the issue. |
| Light does not work at all. | Check all wiring for disconnections, shorts and burnt wiring and connections. Confirm steady input voltage to the light fixture, fluctuating input voltage will harm the LED driver and can lead to premature failure. If input voltage is not in the voltage range of the fixture, you will need to find the source of your input voltage issue. Call Tech Support for help if none of the above solves the issue.  |

For more technical information, install questions, troubleshooting help or warranty claims, we have a dedicated US Tech and Customer Support Team to help solve any issues you have and can be reached by email or phone. If you need help with any of our products, we are here for you so that you are never in the dark!

## BETTER LIGHTS. BETTER SUPPORT.





**CERTIFIED**



**LISTED**





US based  
phone and online  
customer support



**5 YEARS**  
WARRANTY